



















Features

- · Built-in battery charger and UPS function
- TTL signals for status detection: AC OK, Battery disconnect, Battery reverse polarity, Battery low, Battery full and Discharge
- Built-in AC and battery circuit ON/OFF switchs enhance safetyness Central monitoring system during maintenance
- · Forced UPS mode for battery maintenance
- Protections: Short circuit / Overload / Over voltage / Over temperature / Battery low voltage / Battery reverse polarity (No damage)
- -20 ~ +60°C wide operating temperature
- Output voltage adjustable (-20%~+5%) for CH1 by VR
- Suitable for lead acid and lithium-ion batteries
- · Design refer to GB17945 system requirement
- 1U low profile (30 mm)
- · 3 years warranty

Applications

- · Fire emergency and evacuation system
- Public safety battery back-up
- Security system
- Uninterruptible DC-UPS system
- · Industrial automation


GTIN CODE

MW Search: https://www.meanwell.com/serviceGTIN.aspx

Description

LAD-120 series is a 120W economical AC/DC low profile security power supply with UPS function. Adopting the input range from 90Vac to 264Vac and supports output 13.8V, 27.6V, 41.5V and 55.2Vdc. With high efficiency up to 88% and built-in AC, battery switch for easy maintenance. In addition, LAD-120 series also provide TTL signals for AC OK, battery disconnect, battery reverse polarity (No damage), battery low detection, battery full and discharge, to allow easy integration into security and fire systems directly.

Model Encoding

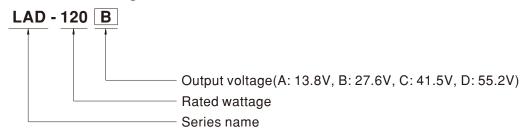




SPECIFICATION

MODEL		LAD-120A		LAD-120B		LAD-120C		LAD-120D	
	OUTPUT NUMBER	CH1	CH2	CH1	CH2	CH1	CH2	CH1	CH2
	DC VOLTAGE	13.8V	13.8V	27.6V	27.6V	41.5V	41.5V	55.2V	55.2V
	RATED CURRENT	7.7A	1A(Battery Charger)	3.4A	1A(Battery Charger)	1.9A	1A(Battery Charger)	1.21A	1A(Battery Charg
	CURRENT RANGE	0 ~ 8.7A		0 ~ 4.4A		0 ~ 2.9A		0 ~ 2.21A	
	RATED POWER	120W		121.4W		120.35W			
L		1			I			121.99W	
- H	RIPPLE & NOISE (max.) Note.2			150mVp-p		240mVp-p		360mVp-p	
OUTPUT	VOLTAGE ADJ. RANGE	CH1: 10.8 ~ 14		CH1: 21.6 ~ 29		CH1: 32.4 ~ 43.		Ch1: 43.5 ~ 58\	V
	VOLTAGE TOLERANCE Note.3	±1.0%		±1.0%		±1.0%		±1.0%	
	LINE REGULATION	±0.5%		±0.5%		±0.5%		±0.5%	
	LOAD REGULATION	±0.5%		±0.5%		±0.5%		±0.5%	
	SETUP, RISE TIME	500ms, 40ms/230VAC 500ms, 40ms/115VAC at full load							
	HOLD UP TIME (Typ.)	40ms/230VAC 9ms/115VAC at full load							
	BATTERY STATIC DISCHARGE	<100uA							
	CURRENT	<100μA							
	VOLTAGE RANGE	90 ~ 264VAC 127 ~ 370VDC							
	FREQUENCY RANGE	47 ~ 63Hz							
INDUT	EFFICIENCY (Typ.)	86%		88%		88%		88%	
INFUI	AC CURRENT (Typ.)	2.5A/115VAC 1.5A/230VAC							
	INRUSH CURRENT (Typ.)	COLD START		55A/230VAC					
	LEAKAGE CURRENT	0.5mA / 240VA		33A/230VAC					
	ELARAGE CORRENT			1100/					
	OVERLOAD	CH1:105 ~ 135% CH2:90 ~ 110% Protection type: CH1 OLP, CH2 with battery: The unit will enter to UPS mode when CH1 is around 105%~160%, when total output of CH1 + CH2 reach around 125%~135% output hiccup(120D shuts dow CH1 OLP, CH2 without battery: Hiccup mode o/p voltage, recovers automatically after fault condition is removed (120D shuts down,re-power on to removed)							
PROTECTION				•	ult condition does		•	•	fault
PROTECTION				`	nal fuse is manda		nection with batte	ry for protection)	
	OVED VOLTACE	CH1:15.5 ~ 18	V	CH1:31 ~ 36V		CH1:47 ~ 55V		CH1:61 ~ 71V	
	OVER VOLTAGE	Protection type	: Shut down o/p	voltage, re-powe	er on to removed				
	OVER TEMPERATURE	Protection type	: Shut down o/p	voltage, re-powe	er on to removed				
İ	BATTERY REVERSE POLARITY	Protected when	reverse polarity	no damage re	covers automatic	ally after fault co	andition is remove	-d	
	BATTERY CUTOFF	9.5V±0.5V	riovoroo polarity	21.5V±0.5V	oovoro aatomatic	32V±0.5V		43V±0.5V	
			h / Open : AC Fai		loo: may 20mA			43V±0.5V	
- H	AC OK	TTE Signal, Hig	II / Opell . AC Fal	I, LOW . AC OK ,	ice . Illax. SulliA	@ 30 4 D C			
	BATTERY DISCONNECT/ REVERSE POLARITY	TTL signal, High / Open : Battery connect/normal ; Low : Battery disconnect/reverse polarity; Ice : max. 30mA@ 50VDC							
FUNCTION	BATTERY LOW								
		TTL signal, High / Open: Battery normal; Low: Battery low; Ice: max. 30mA@ 50VDC TTL signal, High / Open: Battery charging; Low: Battery full; Ice: max. 30mA@ 50VDC							
	BATTERY FULL						50VDC		
	DISCHARGE	0 . 0	h / Open : Charge		ge ; Ice : max. 30	mA@ 50VDC			
- F	WORKING TEMP.		efer to "Derating	Curve")					
	WORKING HUMIDITY	20 ~ 95% RH n							
ENVIRONMENT	STORAGE TEMP., HUMIDITY	-30 ~ +85°C, 1	0 ~ 95% RH non-	condensing					
	TEMP. COEFFICIENT	±0.03%/°C (0 ·	~ 50°C)						
	VIBRATION	10 ~ 500Hz, 5G 10min./1cycle, 60min. each along X, Y, Z axes							
	SAFETY STANDARDS	UL62368-1, BS EN/EN62368-1, AS/NZS62368.1, EAC TP TC 004 approved; Design refer to GB 17945-2010							
	WITHSTAND VOLTAGE	I/P-O/P:3KVAC I/P-FG:2KVAC O/P-FG:0.5KVAC							
	ISOLATION RESISTANCE	I/P-O/P, I/P-FG, O/P-FG:100M Ohms / 500VDC / 25°C/ 70% RH							
		Parameter							
		Conducted	BS EN/EN55032 (CISDD32) CI		Class A	lass A			
SAFEITA	EMC EMISSION Radiated				BS EN/EN55032 (CISPR32), Class A EAC TP TC 020		Class A		
EMC (Note 4)		Harmonic Cur	ent (Note 5)	BS	EN/EN61000-3-2		Class A		
(Note 4)		Voltage Flicker							
		Parameter		Sta	ndard		Test Level / No	ote	
		ESD		BS			Level 3 8KV ai	el 3, 8KV air ; Level 2, 6KV contact; criteria	
		Radiated			EN/EN61000-4-3		Level 3, 10V/m		
								-	
	EMC IMMUNITY							2KV; criteria A	
	Surge							1KV/Line-Line ;2KV/Line-FG ;criteria	
		Conducted BS EN/EN61000-4-6 Level 3, 10V; criteria A							
		Magnetic Field		BS	EN/EN61000-4-8		Level 4, 30A/m	; criteria A	
	MTBF	1509.9K hrs mi	n. Telcordia SF	R-332 (Bellcore)	; 209.4K hrs m	in. MIL-HDBk	(-217F (25°C)		
OTHERS	DIMENSION	159*97*30mm (L*W*H)							
	PACKING	0.42Kg; 30pcs/13.6Kg/0.77CUFT							
	 Ripple & noise are measure Tolerance : includes set up The power supply is consid 	ameters NOT specially mentioned are measured at 230VAC input, rated load and 25°C of ambient temperature. & noise are measured at 20MHz of bandwidth by using a 12" twisted pair-wire terminated with a 0.1 µ F & 47 µ F parallel capacitor. Ince: includes set up tolerance, line regulation and load regulation. Ince: includes set up tolerance, line regulation and load regulation. Ince: includes set up tolerance, line regulation and load regulation. Ince: includes set up tolerance, line regulation and load regulation. Ince: includes set up tolerance, line regulation and load regulation. Ince: includes set up tolerance, line regulation and load regulation. Ince: includes set up tolerance, line regulation and load regulation. Ince: includes set up tolerance, line regulation and load regulation. Ince: includes set up tolerance, line regulation and load regulation. Ince: includes set up tolerance, line regulation and load regulation. Ince: includes set up tolerance, line regulation and load regulation. Ince: includes set up tolerance, line regulation and load regulation. Ince: includes set up tolerance, line regulation and load regulation. Ince: includes set up tolerance, line regulation and load regulation. Ince: includes set up tolerance, line regulation and load regulation. Ince: includes set up tolerance, line regulation and load regulation. Ince: includes set up tolerance, line regulation and load regulation. Ince: includes set up tolerance, line regulation and load regulation. Ince: includes set up tolerance, line regulation and load regulation. Ince: includes set up tolerance, line regulation.							
NOTE	perform these EMC tests, p (as available on https://www								



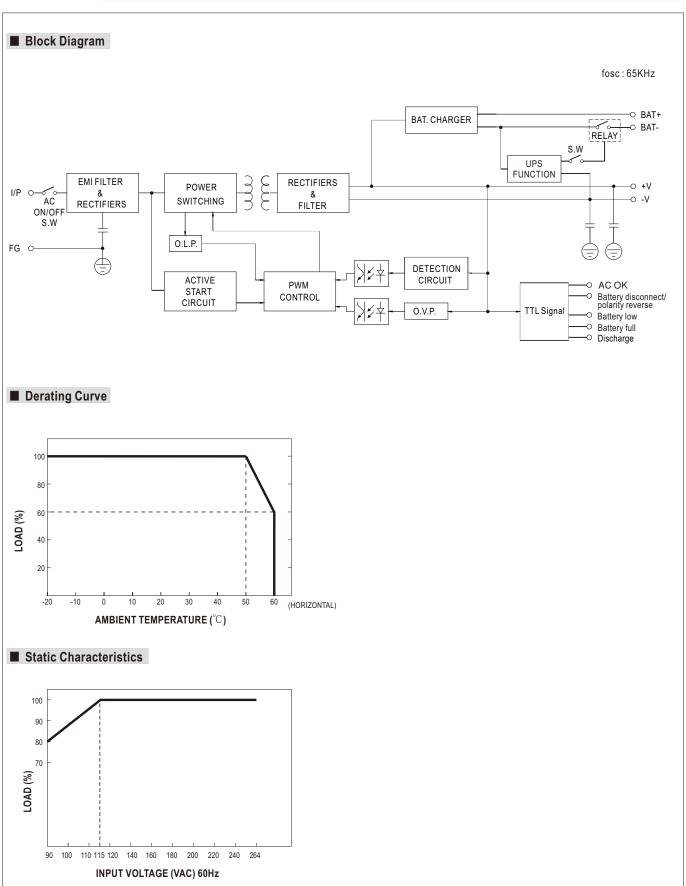




■ Suggested Application


1.DC-UPS function

When AC voltage is abnormal, The UPS function will activate and power source switch battery backup.

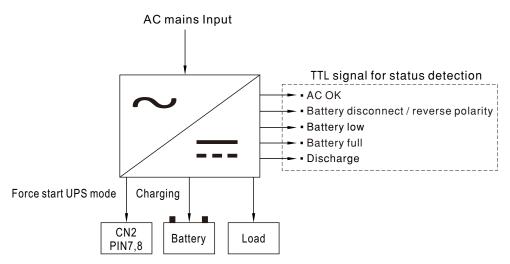

2. Function signals by TTL

- TTL Signal is sent out through pins from CN2.
- External voltage source is required for the TTL signal. The maximum voltage is 50VDC and the maximum sink current is 30mA.

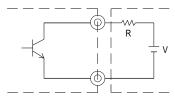

External voltage and resistor

(The max. sink current is 30mA at 50VDC)

2.1 AC OK: Detection of AC status

Between pin 1 and pin 4	Description
Low (0.3V max. at 30mA)	The signal is "Low" when the AC input is normal
High or open (External applied voltage 50V max.)	The signal turns to be "High" when the AC input is abnormal



2.2 Battery Disconnected/Reverse Polarity: Battery status detection

Between pin 2 and pin 4	Description
Low (0.3V max. at 30mA)	The signal is "Low" when the battery is not connected or inversely connected
High or open (External applied voltage 50V max.)	The signal turns to be "High" when the battery is connected or normal


Note. The signals of battery disconnected and reverse polarity can only be detected during the first power transmission, it is can not be detected at any time.





2.3 Battery Low: Battery low detection

Between pin 3 and pin 4	Description
Low (0.3V max. at 30mA)	The signal is "Low" when the battery is under voltage protected
High or open (External applied voltage 50V max.)	The signal turns to be "High" when the battery is normal

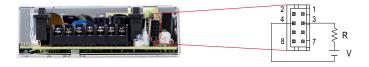

2.4 Battery Full: Battery full detection

Between pin 4 and pin 5	Description
Low (0.3V max. at 30mA)	The signal is "Low" when the battery is fully charged
High or open (External applied voltage 50V max.)	The signal turns to be "High" when the battery is charged



2.5 Discharge: Discharge detection

Between pin 4 and pin 6	Description
Low (0.3V max. at 30mA)	The signal is "Low" when the power supply is discharging
High or open (External applied voltage 50V max.)	The signal is "High" when the main power is working



2.6 Forced Start: Forced start UPS mode

Pin 7 & 8	Status
Short	Forced start UPS mode
Open	Normal






■ Mechanical Specification

(Unit: mm , tolerance ± 1mm)

Case No. 241

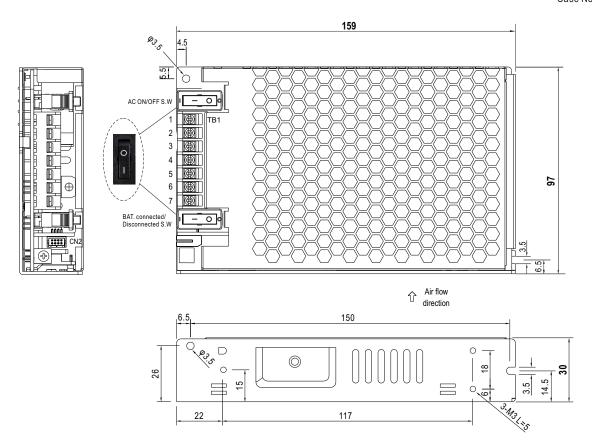

Pin No.	Assignment(TTL Signal)	Mating Housing	Terminal
1	AC OK		
2	Battery disconnect/ reverse polarity		
3	Battery low	TIVE DI IO	TI(D DI T 40 (1 5)
4	GND	TKP DH2 or equivalent	TKP DHT-1S(LF) or equivalent
5	Battery full	or equivalent	or equivalent
6	Discharge		
7,8	Open : normal Short : forced start UPS mode		

※ Terminal Pin No. Assignment(TB1)

Pin No.	Assignment
1	AC/L
2	AC/N
3	FG ±
4	DC OUTPUT -V
5	DC OUTPUT +V
6	BAT -
7	BAT +

/I\

DC OUTPUT -V and BAT - can not be shorted.

■ Installation Manual

Please refer to : http://www.meanwell.com/manual.html